

## BEN diaľkový ovládač PANASONIC EUR7628030 - neoriginálny



Diaľkov\_ovl\_52dff5a3383c2.jpg



### Cena

8,33 €

Ušetríte: 7.019996 €

2,98 €

na sklade

[Opýtajte sa na tento produkt](#)

Výrobca: [OEM](#)

Popis

### Kompatibilné s nasledovnými modelmi:

- TX29PM1P, TC15M1M, TC15M1R, TC21S1M, TX14JT1, TX14JT1L, TX21MD4, TX21MD4C, TX21MD4L, TX21MK1, TX21MK1M, TX21S4, TX24DX1, TX25AS10F, TX25DP4, TX25LD, TX25LD4C, TX25LD4DP, TX25LD4DPC, TX25LD90F, TX25MD3L, TX25MD4, TX25MK1, TX25MK1C, TX25SL1F, TX25XD4, TX25XD4C, TX25XD4F, TX25XD90, TX25XD90P, TX26MK1, TX2810, TX28DK1, TX28DK2, TX28DK2C, TX28DT2, TX28DT2/E, TX28DT2E, TX28DT2EC, TX28EX, TX28EX1F, TX28EX4F, TX28LB10CS, TX28LD20C, TX28LD20F, TX28LD4, TX28LD4C, TX28LD4DP, TX28LD90, TX28LD90F, TX28LK10C, TX28LK10CS, TX28MD4, TX28MD4C, TX28MD4F, TX28MK1, TX28MK1M, TX28PG45, TX28PK1, TX28PK10, TX28PK10E, TX28PK10L, TX28PK2, TX28PK25, TX28PK2E, TX28PK3, TX28PK3C, TX28PK3L, TX28PL1, TX28PL10, TX28PL1C, TX28PL1C1, TX28PL4, TX28PS12, TX28SK10C, TX28SK1C, TX28SL, TX28SL10F, TX28TD2E, TX28XD4, TX28XD4A, TX28XD4C, TX28XD4C1, TX28XD4F, TX28XD90, TX28XDC1, TX29AK1, TX29AL30D, TX29AS10, TX29AS10C, TX32DK1, TX32DK1L, TX32DK2, TX32DT2, TX32PF10, TX32PF10F, TX32PF10FD, TX32PG30, TX32PK1, TX32PK2, TX32PK20, TX32PK25, TX32PK25D, TX32PK25F, TX32PK2E, TX32PK3, TX32PK30, TX32PL1, TX32PL10, TX32PL10C1, TX32PL4, TX32PL4C, TX32PL4C1, TX32PS12, TX32R4DP, TX33AK10, TX36PF10, TX36PF10F, TX36P110, TX36PL30, TX42PT10, TX47PT1, TX47PT10, TX82LD4, TXW28D5F, TXW28DK1, TXW28PK2, TXW28R4, TXW28R4DP, TXW28R4F, TXW32D4DP, TXW32D5F, TXW32R4, TXW32R4DP, Granada 95940E, Granada 95970G, Granada C51SN6, Granada C59SN6, Granada C66SN6, OTTO-VERSAND TX25SL1F
- OTTO-VERSAND TX28PL1
- OTTO-VERSAND TX28PL10D
- OTTO-VERSAND TX29PS11
- OTTO-VERSAND TX32DK20
- OTTO-VERSAND TX32DK20
- OTTO-VERSAND TX32DK20
- OTTO-VERSAND TX32PL10D
- OTTO-VERSAND TX32PS11D

- PANASONIC 28DK2
- PANASONIC TC15M1M
- PANASONIC TC21S1M
- PANASONIC TX20LA2
- PANASONIC TX20LA2F
- PANASONIC TX20LA2P
- PANASONIC TX21AP2D
- PANASONIC TX21AP2DB
- PANASONIC TX21AP2F
- PANASONIC TX21AP2P
- PANASONIC TX21AP2PB
- PANASONIC TX21MD4
- PANASONIC TX21MD4C
- PANASONIC TX21MD4L
- PANASONIC TX21MK1
- PANASONIC TX21MK1M
- PANASONIC TX21S4
- PANASONIC TX24DX1
- PANASONIC TX25AS10F
- PANASONIC TX25DP4
- PANASONIC TX25LD
- PANASONIC TX25LD4C
- PANASONIC TX25LD4DP
- PANASONIC TX25LD4DPC
- PANASONIC TX25LD90F
- PANASONIC TX25LK10F
- PANASONIC TX25MD4
- PANASONIC TX25MD4C
- PANASONIC TX25MD4F
- PANASONIC TX25MD4I
- PANASONIC TX25MD4P
- PANASONIC TX25MK1
- PANASONIC TX25PX10D
- PANASONIC TX25SL1F
- PANASONIC TX25XD4C
- PANASONIC TX25XD4F
- PANASONIC TX25XD90
- PANASONIC TX25XD90P
- PANASONIC TX26MK1
- PANASONIC TX28DK1
- PANASONIC TX28DK2C
- PANASONIC TX28DT2
- PANASONIC TX28DT2E
- PANASONIC TX28DT2EC
- PANASONIC TX28EX
- PANASONIC TX28EX1F
- PANASONIC TX28EX4F
- PANASONIC TX28LB10CS
- PANASONIC TX28LD20C
- PANASONIC TX28LD20F
- PANASONIC TX28LD4
- PANASONIC TX28LD4C
- PANASONIC TX28LD4DP
- PANASONIC TX28LD80C
- PANASONIC TX28LD90
- PANASONIC TX28LD90F
- PANASONIC TX28LK10C
- PANASONIC TX28LK10CS
- PANASONIC TX28MD4
- PANASONIC TX28MD4C
- PANASONIC TX28MD4F
- PANASONIC TX28MD4L
- PANASONIC TX28MK1
- PANASONIC TX28MK1M
- PANASONIC TX28PG45
- PANASONIC TX28PK1
- PANASONIC TX28PK10
- PANASONIC TX28PK10C
- PANASONIC TX28PK10E

- PANASONIC TX28PK10L
- PANASONIC TX28PK2
- PANASONIC TX28PK2E
- PANASONIC TX28PK25
- PANASONIC TX28PK3
- PANASONIC TX28PK3C
- PANASONIC TX28PK3L
- PANASONIC TX28PL1C1
- PANASONIC TX28PL10
- PANASONIC TX28PL10D
- PANASONIC TX28PL10F
- PANASONIC TX28PL4
- PANASONIC TX28PM1
- PANASONIC TX28PM1F
- PANASONIC TX28PS12
- PANASONIC TX28SK1C
- PANASONIC TX28SK10C
- PANASONIC TX28SL
- PANASONIC TX28SL10F
- PANASONIC TX28SL20C
- PANASONIC TX28TD2E
- PANASONIC TX28XD4
- PANASONIC TX28XD4A
- PANASONIC TX28XD4C
- PANASONIC TX28XD4C1
- PANASONIC TX28XD4F
- PANASONIC TX28XD90
- PANASONIC TX28XDC1
- PANASONIC TX2810
- PANASONIC TX29AK1
- PANASONIC TX29AL30D
- PANASONIC TX29AS10
- PANASONIC TX29AS10C
- PANASONIC TX29AS10CB
- PANASONIC TX29AS10SI
- PANASONIC TX29AS10SW
- PANASONIC TX29E40
- PANASONIC TX29E40D
- PANASONIC TX29PM1D
- PANASONIC TX29PM1F
- PANASONIC TX29PM11B
- PANASONIC TX29PS11
- PANASONIC TX29PS11D
- PANASONIC TX29PS11F
- PANASONIC TX29PS2D
- PANASONIC TX29PS2F
- PANASONIC TX29PS20D
- PANASONIC TX29PS20F
- PANASONIC TX32DK1
- PANASONIC TX32DK1L
- PANASONIC TX32DK2
- PANASONIC TX32DK20D
- PANASONIC TX32DK20DB
- PANASONIC TX32DK20F
- PANASONIC TX32DT2
- PANASONIC TX32E40D
- PANASONIC TX32M22D
- PANASONIC TX32PF10
- PANASONIC TX32PF10F
- PANASONIC TX32PF10FD
- PANASONIC TX32PG30
- PANASONIC TX32PK1
- PANASONIC TX32PK2
- PANASONIC TX32PK2E
- PANASONIC TX32PK20
- PANASONIC TX32PK25
- PANASONIC TX32PK25D
- PANASONIC TX32PK25F
- PANASONIC TX32PK3

- PANASONIC TX32PK30
- PANASONIC TX32PL1
- PANASONIC TX32PL10C1
- PANASONIC TX32PL10D
- PANASONIC TX32PL10F
- PANASONIC TX32PL10P
- PANASONIC TX32PL4
- PANASONIC TX32PL4C
- PANASONIC TX32PL4C1
- PANASONIC TX32PM11
- PANASONIC TX32PM11D
- PANASONIC TX32PM11F
- PANASONIC TX32PS10
- PANASONIC TX32PS11
- PANASONIC TX32PS11D
- PANASONIC TX32PS11F
- PANASONIC TX32PS12
- PANASONIC TX32R4DP
- PANASONIC TX33AK10
- PANASONIC TX36PF10
- PANASONIC TX36PF10F
- PANASONIC TX36PI10
- PANASONIC TX36PL30
- PANASONIC TX42PT10
- PANASONIC TX47PT1
- PANASONIC TX47PT10
- PANASONIC TXW28D5F
- PANASONIC TXW28DK1
- PANASONIC TXW28PK2
- PANASONIC TXW28R4
- PANASONIC TXW28R4DP
- PANASONIC TXW28R4DPC
- PANASONIC TXW28R4F
- PANASONIC TXW32D4DP
- PANASONIC TXW32D5F
- PANASONIC TXW32R4
- PANASONIC TXW32R4DP

- EUR 7628030, EUR7628010, LXP832, EUR7628030, EUR7628010, EUR7628030AR, EUR 7628030AR

*Pozn.: Diaľkové ovládanie nie je originál, ale plne kompatibilný náhradný diaľkový ovládač.*